

Pre-preparation

EasyMop GMP®




STEP 1: Insert the MopJump® pick-up aid into the EasyMop GMP® system box and fill with cleaning solution.



STEP 2: Load 10-12 mops into the EasyMop GMP® system box with the backing material facing upwards.



STEP 3: Close the lid, turn the system box EasyMop GMP® upside down and wait 10 minutes. Turn the box back and open the lid.

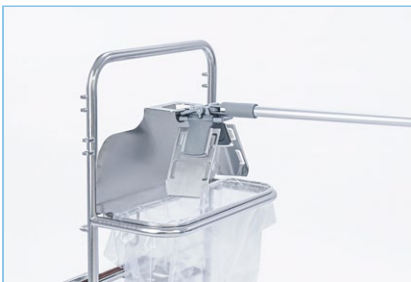

STEP 4: Open the mop without touching it.



STEP 5: Pick up soaked mop without touching it.



STEP 6: Carry out the wiping process.



STEP 7: Drop the mop without touching it and repeat STEP 5 to 7.



You can find more workflows in our downloads:

pfennig-reinigungstechnik.com/en/service/downloads

The Home of Clean